


NOTES:

1. APPLY "STOP" PAVEMARK AT EACH STOP SIGN LOC. (ALL APPROPRIATE LANES).
2. APPLY LEFT TURN ARROW PAVEMARK WITHIN EACH LEFT TURN LANE ON VICTORIA.
3. PAINT CURB RED ON BOTH SIDES OF VICTORIA FROM CRIDGE TO 200' BOTH NORTH AND SOUTH OF CRIDGE (SEE DRAWING).

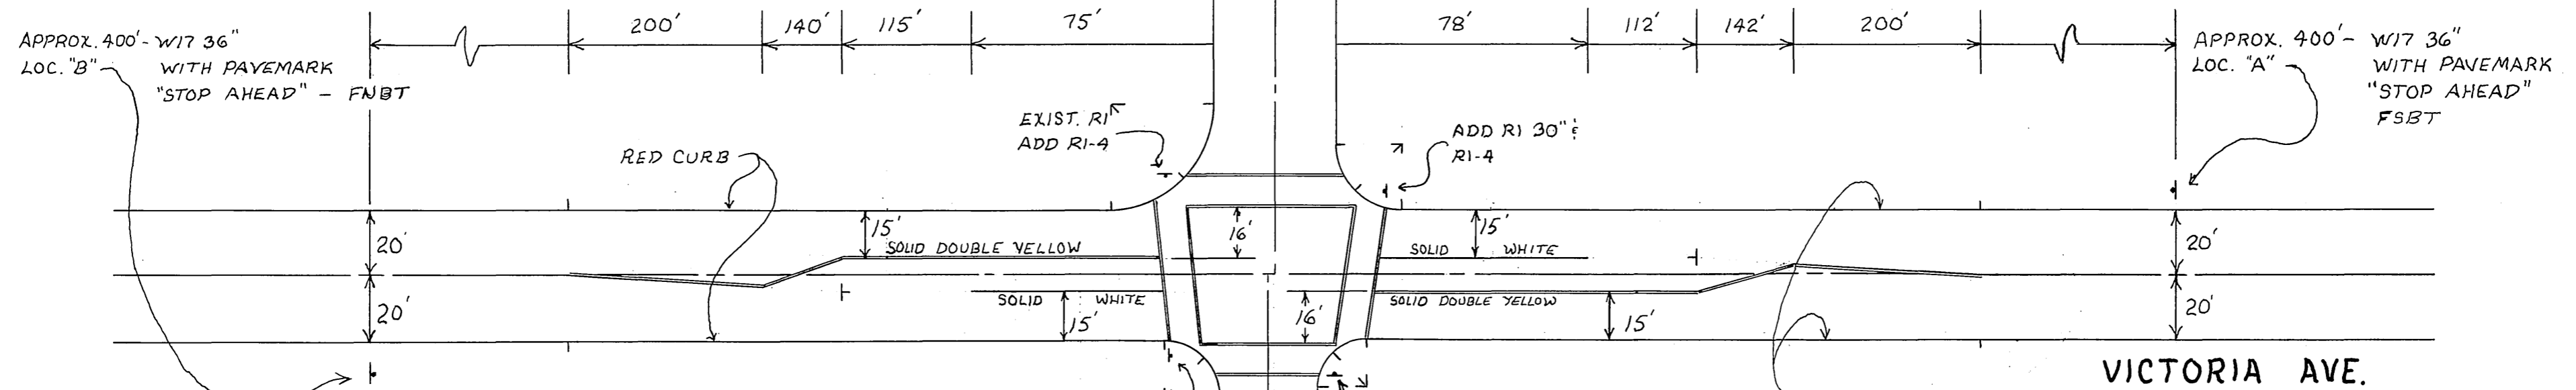

4. INSTALL ON DOUBLE YELLOW (VICTORIA) 1 PAIR TWO-WAY YELLOW REFL. MARKERS EVERY 20' FROM CRIDGE TO 200' S/O CRIDGE AND FROM CRIDGE TO 200' N/O CRIDGE.
5. INSTALL ON SOLID WHITE (VICTORIA) 1 ONE-WAY CLEAR REFL. MARKER EVERY 20' FROM CRIDGE TO 75' S/O CRIDGE AND FROM CRIDGE TO 75' N/O CRIDGE.

VICTORIA AVE. ⤴
 CRIDGE ST. SCALE 1"=40'